



ER REPLACEMENT NUT PARTS

Part Number	Description
ER16-1	ER16 Nut Bearing/Spacer Set
ER20-1	ER20 Nut Bearing/Spacer Set
ER25-1	ER25 Nut Bearing/Spacer Set
ER32-1	ER32 Nut Bearing/Spacer Set
ER40-1	ER40 Nut Bearing/Spacer Set

ER CHUCK NUT WRENCHES

Part Number	Description
08-HSSPAN	Fits ER8 Chuck Nut
011-HEX	Fits ER11 Chuck Nut
016-SPAN	Fits ER16 Chuck Nut
020-SPAN	Fits ER20 Chuck Nut
025-SPAN	Fits ER25 Chuck Nut
032-SPAN	Fits ER32 Chuck Nut
040-SPAN	Fits ER40 Chuck Nut
011-HEX(TORQUE)	ER11 Torque Hex Wrench
016-SPAN(TORQUE)	ER16 Torque Spanner Wrench
020-SPAN(TORQUE)	ER20 Torque Spanner Wrench
025-SPAN(TORQUE)	ER25 Torque Spanner Wrench
032-SPAN(TORQUE)	ER32 Torque Spanner Wrench
040-SPAN(TORQUE)	ER40 Torque Spanner Wrench

Note: (Torque) indicates adapter to be used with torque wrench.

REPLACEMENT ER BACKUP SCREWS

Part Number	Description
ER8-3	ER8 Backup Screws
ER11-3	ER11 Backup Screws
ER16-3	ER16 Backup Screws
ER20-3	ER20 Backup Screws
ER25-3	ER25 Backup Screws
ER32-3	ER32 Backup Screws
ER40-3	ER40 Backup Screws